

Enhance Blower Weather Cover Installation Instructions




Step 1

Mark the position where the blower cover is to be installed. There are 4 screw holes in the cover base, use these as your guide.

Screw holes

Once you have marked the holes, drill and insert screw plugs (not included).

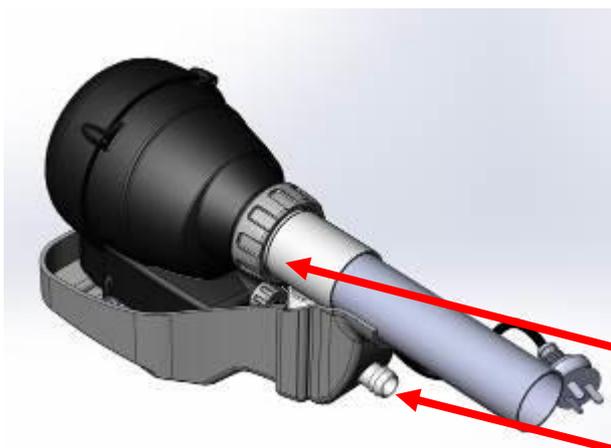


Step 2

Lay the blower base on a flat surface and place the blower into the base, ensuring that your air release check valve & barb are fitted to the spa blower. Insert the air release barb through the hole at the bottom of the base.

Using your mounting screws, pre screw the spa blower to the base.

Air Release Valve


Air release barb

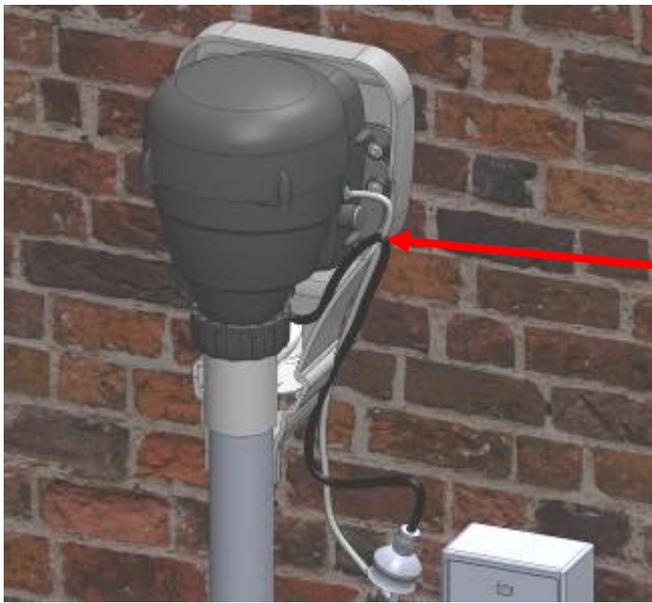

Step 3

Mount the pre-assembled base and blower to the wall. Make sure that the plug lead, air tube or touch pad cable are located in the correct position (see diagram)

Ensure power lead, air tube or touch pad cable are located here.

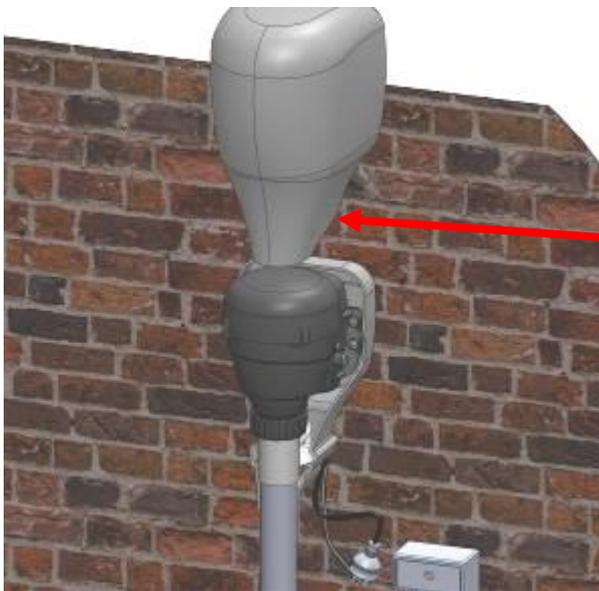

Expand the sides when sliding over.

Step 4

Finally place the outer cover over the top of the blower and mounting base. Slide the outer cover into position by

expanding the lower part of the cover (see diagram). Once it is all the way down the outer cover will locate into the correct position, insert the 2 screws (#6 x 3/4) supplied into the screw holes located at the bottom of the cover to lock the outer cover into place.



Screw Holes

The Enhance Weather Cover when fitted will have a water protection rating of IPX5 and will also reduce the noise level by a further 4dB.